

Unifi AP provisioning

Step 1: SSH to your Unifi radio

ssh to ubnt@192.168.1.20 (or whatever the IP address is.) default password is ubnt, if it something else, I hope you wrote it down when you set it. :)

Step 2: Reset to defaults

You must reset the AP to defaults before changing the inform ip address. To do so execute the following command

```
syswrapper.sh restore-default
```

This will reboot the radio and disconnect your SSH session. Once it comes back online, you will need to reconnect.

Step 3: Set new inform IP address

Now issue the set-inform command with the IP address of your Unifi controller.

```
set-inform http://192.168.0.1:8080/inform  
set-inform https://domain.pl/inform
```

The AP should connect to the controller within a few seconds and you are set.

Z

<https://community.spiceworks.com/how_to/9692-manually-setting-the-controller-address-for-a-unifi-ap>

From:

<https://wiki.ostrowski.net.pl/> - Kacper's Wiki

Permanent link:

https://wiki.ostrowski.net.pl/doku.php?id=tutoriale:ubiquity_ap_provision&rev=1746800298

Last update: **2025/05/09 16:18**